Safety 1st®

SHUTTLE STROLLER

SKY BLACK

Suitable for newborn to 20KG

0m+ 20KG

Illustrations are representative only.
Design and style may vary.

IMPORTANT:
RETAIN FOR FUTURE REFERENCE.

Table of Contents

- WARNINGS page 3
- Components list page 4
- To unfold the stroller page 5
- To assemble the front wheels page 6
  To use the front wheel swivel locks
- To remove the front wheels page 7
- To assemble the rear wheels page 8
  To remove the rear wheels
  To operate the brakes
- To fit the seat page 9
  To remove the seat
  To adjust the seat angle
  Seat forward facing or rear facing
- To fit & remove the bumper bar page 10
  To fit & remove the canopy
  To fit the raincover
- To fit the bootcover page 11
  To adjust handle height
- To fold the stroller page 12
- To secure your child page 13
  To use the tether strap
- To attach the One-Safe Infant Carrier to the stroller page 14
- To remove the One-Safe Infant Carrier from the stroller page 15
- Product care and maintenance page 16
  Customer service

WARNINGS

These instructions detail the safe use, assembly and maintenance of your product. Please read these instructions carefully and ensure that they are followed at all times. Failure to do so could result in serious injury or death.

- **FOLLOW THE MANUFACTURER'S INSTRUCTIONS.**
- **PUT ON ALL THE BRAKES WHENEVER YOU PARK THE STROLLER.**
- **DO NOT LEAVE CHILDREN UNATTENDED.**
- **DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER, UNLESS IN AN APPROVED ACCESSORY.**
- **MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ARE FOLDING, UNFOLDING OR ADJUSTING THE PRAM, OTHERWISE THEY MAY BE INJURED.**
- **SECURE THE CHILD IN THE HARNESS AT ALL TIMES AND ENSURE THAT THE SAFETY HARNESS IS ADJUSTED FIRMLY BUT COMFORTABLY TO THE CHILD'S BODY.**
- A harness can form loops that may be a strangulation hazard. Never leave harness straps connected when not fitted to a child in the stroller.
- Check that the stroller is fully erected and all safety locks are engaged before placing a child in the stroller.
- Do not allow children to stand on the seat or footrest.
- Do not attempt to lift the stroller by the bumper bar or child tray, if it has one.
- Remove the child from the stroller before going up or down stairs or escalators.
- Regularly inspect the stroller for any parts that are loose, broken, torn or missing. Attend to the problem as soon as it is noticed.
- Use only those accessories which are supplied by Dorel Australia, and approved for use with this stroller.
- Do not run or jog with this stroller.
- Do not use the stroller near an open fire, barbecue or exposed flame.
- To avoid danger of suffocation, keep any plastic bags away from babies and children.
- Use the tether strap to prevent the stroller rolling away.
- Keep children away from the stroller when unfolding and do not let them play with the folded stroller.
- Engage front wheel swivel lock (where applicable), to lock front wheel(s) when travelling on rough or uneven surfaces.
- This product is not intended for commercial use.
- Never put hot liquids in any cup holder (when fitted).
- The weight of the child shall not exceed **20kg**.
  Carry basket capacity **4kg**.

Components List:

One-Safe Infant Carrier
(sold separately)

Head pillow

Bootcover

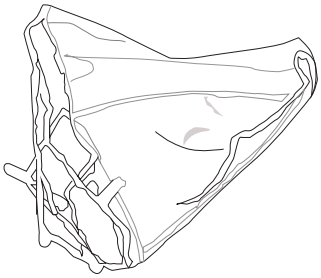

Raincover

Assembling: Shuttle Stroller Sky Black

TO UNFOLD THE STROLLER

- Remove the security tie, if the stroller has one.
- Release the storage latch by pulling the latch away from the frame, as per **Figure 1.**

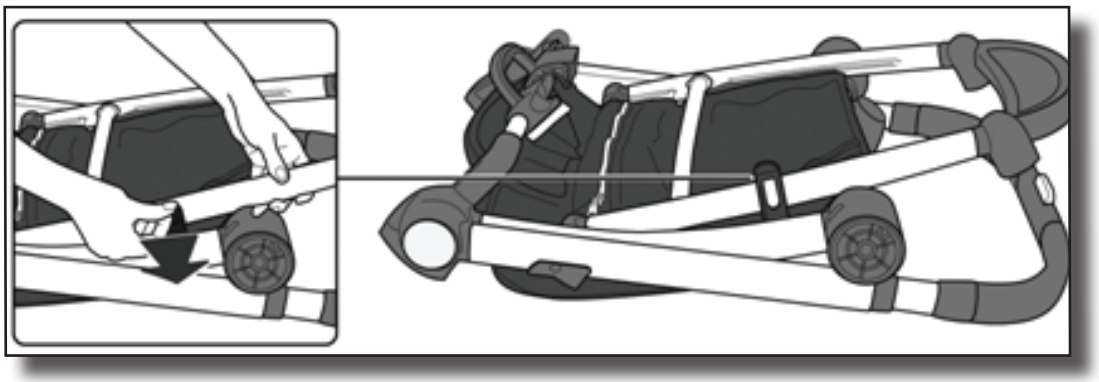

Figure 1

- Grasp the footrest and lift it as high as possible so that it ‘clicks’ into place, as per **Figure 2.**

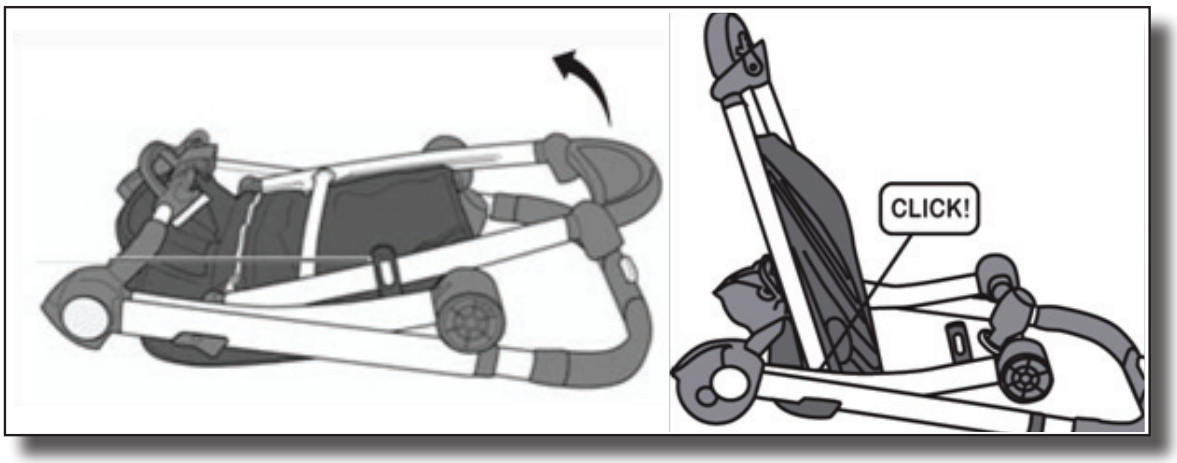

Figure 2

- Turn assembly upside down, press the white release button (**3A**) and lift up the handlebar (**3B**) until both frame latches ‘click’ into the locked position (**3C**), as per **Figure 3.**

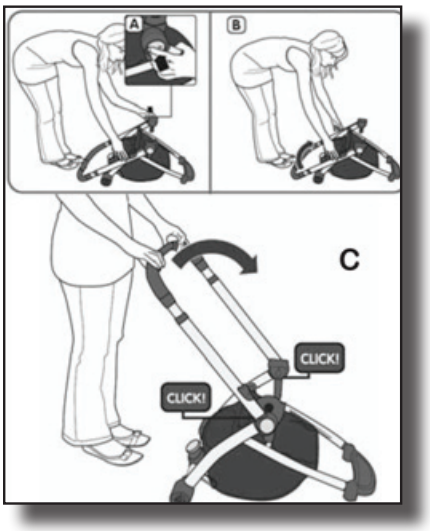

Figure 3

Check that the frame is locked open by pushing downward on the handle.

Assembling: Shuttle Stroller Sky Black (cont)

TO ASSEMBLE THE FRONT WHEELS

- Align the pins on the tops of the front wheels with the holes in the underside of the wheel housings, as per **Figure 4** (**A**).
- Firmly push the pins into the housing until they 'click' into place, as per **Figure 4** (**B**).

Check the wheels are attached by attempting to pull them out again.

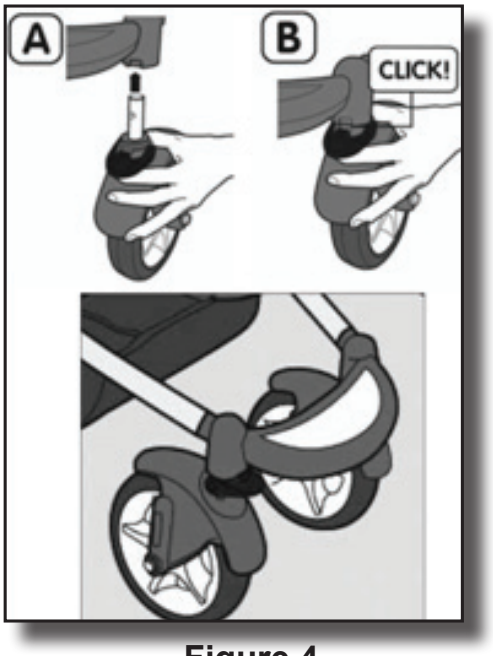

Figure 4

TO USE THE FRONT WHEEL SWIVEL LOCKS

- Slide the slider in the middle of the unit up or down as the case may be in each wheel, to lock or unlock the wheel, as per **Figure 5.**

Unlock front wheel swivel locks when on rough or uneven surfaces.

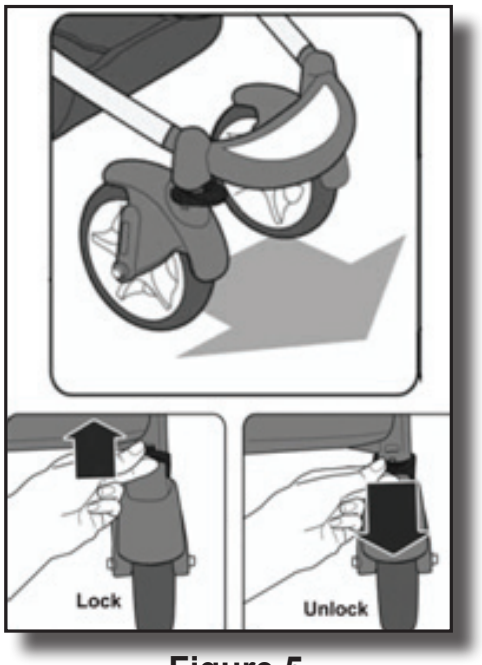

Figure 5

Assembling: Shuttle Stroller Sky Black (cont)

TO REMOVE THE FRONT WHEELS

Should only be performed by an adult.

- Lay stroller on its side, as per **Figure 6.**
- Align the swivel lock slider with the slot vertically and ensure the locking button is visible inside the hole located on the inside of the front swivel wheel vertical shaft housing.
- Once visible, press on the tab with the screwdriver and pull on the wheel assembly to remove.

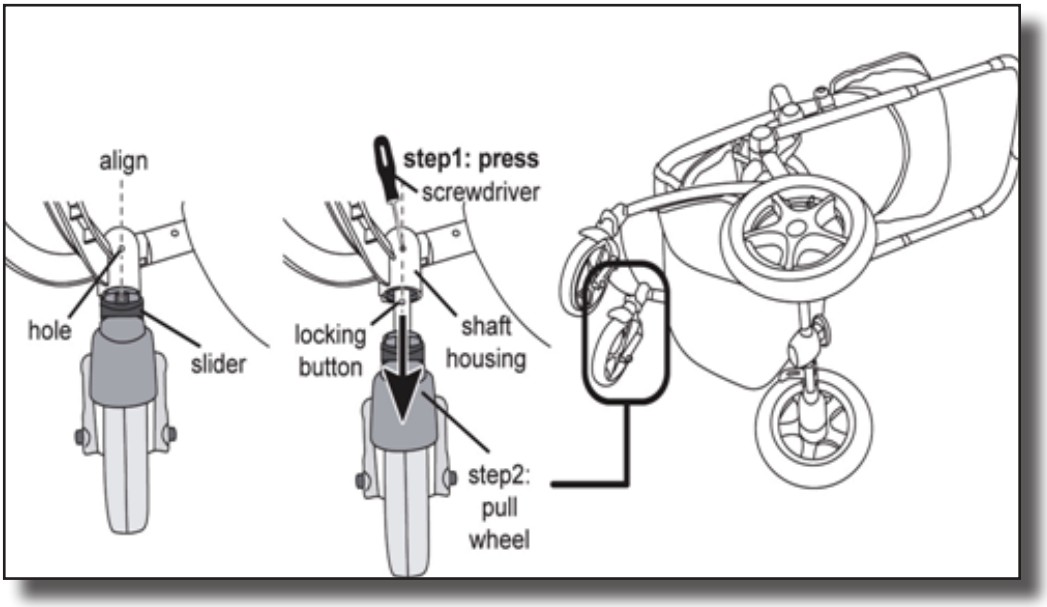

Figure 6

Lay stroller on the other side and repeat the step above to remove the opposite wheel assembly.

Assembling: Shuttle Stroller Sky Black (cont)

TO ASSEMBLE THE REAR WHEELS

- Push each wheel into position, as per **Figure 7.**

Check that both wheels are properly attached by attempting to pull them out.

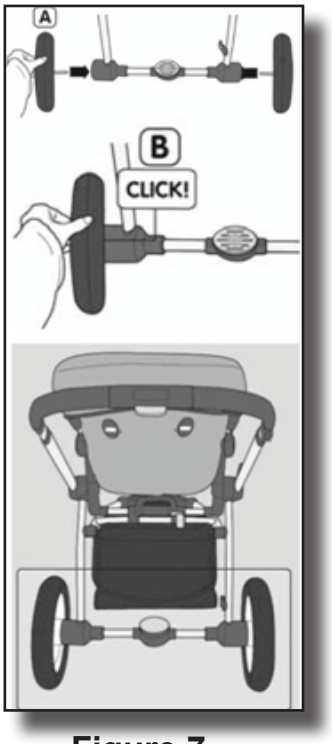

Figure 7

TO REMOVE THE REAR WHEELS

- Press the metallic release button **Figure 8** (**A**), located on the rear axle inwards and pull the wheel **Figure 8** (**B**) outwards. Repeat same step for other wheel.

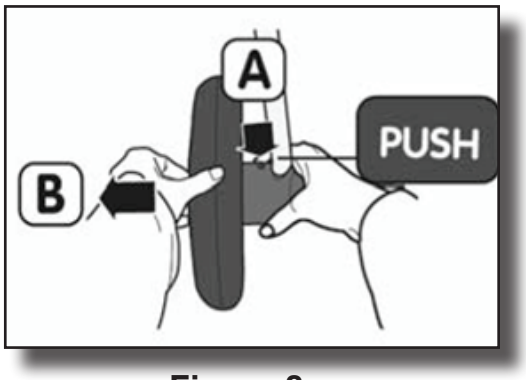

Figure 8

TO OPERATE THE BRAKES

- Push down on the **Red** pedal located on the centre of the rear wheel axle to set the park brake, as per **Figure 9.**

To release, push down on the pedal again.

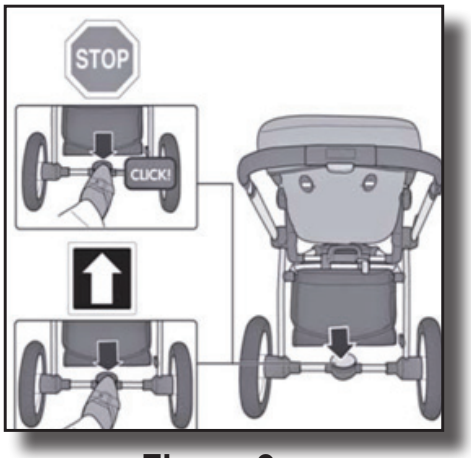

Figure 9

Using: Shuttle Stroller Sky Black (cont)

TO FIT THE SEAT

- The seat is suitable for newborn. If your child is not able to sit up unassisted, use the fully reclined position only.

  Placing the seat into position.

- Lower the seat onto the frame until it 'clicks', as per **Figure 10.**

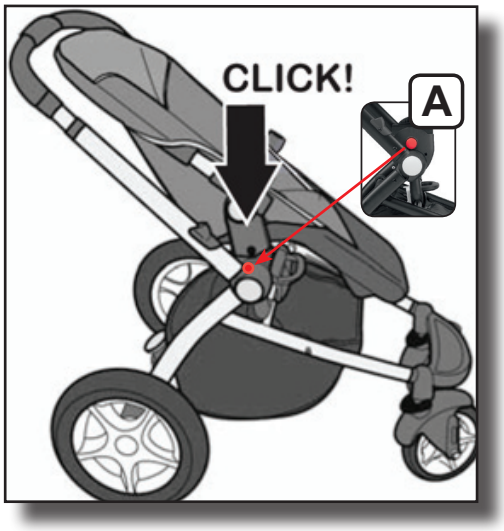

Figure 10

TO REMOVE THE SEAT

- Press (**Red Button**) on each side of the seat mount and lift seat clear,as per **Figure 10** (**A**).

TO ADJUSTING THE SEAT ANGLE

- The seat can be adjusted to **3** positions:
- A sitting position and **2** reclining positions.
- Push the adjustment buttons (**A**) on both sides and tilt the seat into the desired position (**B**), as per **Figure 11.**

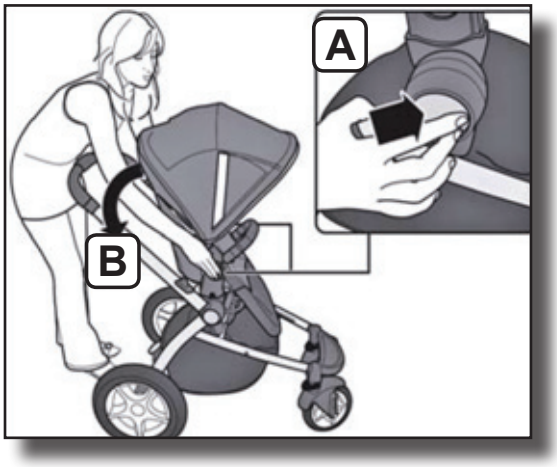

Figure 11

SEAT FORWARD FACING OR REAR FACING

- Push the release button (**A**) on both sides inwards and lift the seat from the frame.
- Turn the seat in either facing forward or facing you position and lower the seat onto the frame again until it 'clicks', as per **Figure 12.**

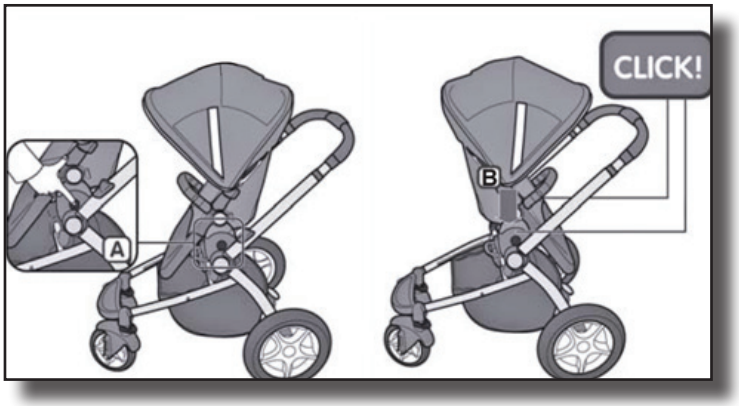

Figure 12

When positioning and adjusting the seat, check that the adjustment/ release buttons are locked on both sides.

Using: Shuttle Stroller Sky Black (cont)

TO FIT & REMOVE THE BUMPER BAR

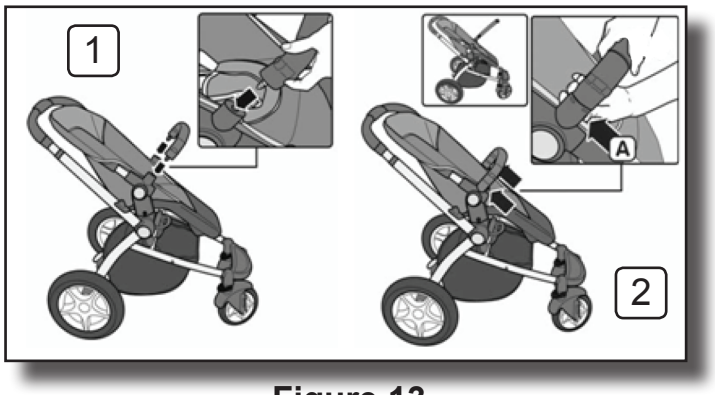

Figure 13

- **To Fit.**
  Align and insert the locator pins into the mounting holes on the armrests until they 'click' and lock in place at both ends, as per **Figure 13** (**1**).
- **To Remove.**
  Press button (**A**) located on each side of the bumper bar and pull it clear of the stroller, as per **Figure 13** (**2**).

TO FIT & REMOVE THE CANOPY

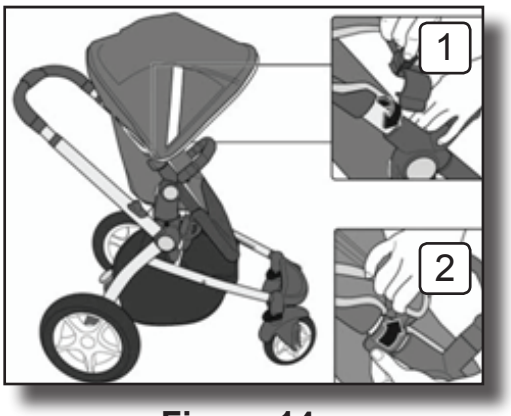

Figure 14

- **To Fit.**
  Attach canopy to seat frame by closing the clips, as per **Figure 14** (**1**).
- **To Remove.**
  Remove canopy by releasing the clips, as per **Figure 14** (**2**).

TO FIT THE RAINCOVER

Figure 15

- Align the zipper on the raincover to the zipper on the right end of the canopy, as per **Figure 15** (**A**).
- Zip the raincover to the canopy completely and hook the other end of the raincover to the underside of the footrest, as per **Figure 15** (**B**).

Using: Shuttle Stroller Sky Black (cont)

TO FIT THE BOOTCOVER

- The bootcover is attached to the frame by attaching the two velcro straps at the top of the bootcover on each side of the frame, as per **Figure 16.**
- Hook the other end of the bootcover to the underside of the footrest.

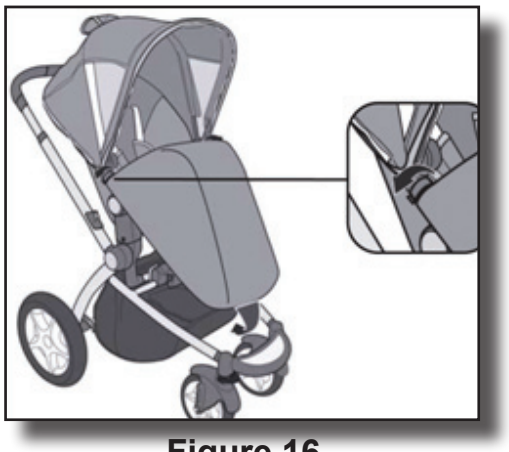

Figure 16

TO ADJUST HANDLE HEIGHT

- Push adjustment button (**1**) located on the centre of the handlebar in (**A**) and slide the handle bar up or down to the desired height (**B**).
- While sliding, release button to allow handle bar to lock into place with a ‘click’, as per **Figure 17.**

Figure 17

Using: Shuttle Stroller Sky Black (cont)

TO FOLD THE STROLLER

- Apply the brakes, remove the bootcover, raincover and any items in the basket, disengage the front wheel swivel locks.
- Remove the seat prior to folding, as per page **6**.
- Lower the handle height, squeeze latch **1** top centre of the handle.
- Simultaneously push down on the release latch **2** as per **Figure 18 (A)** on the right side of the handle with one hand and press release button **3** on the left of the handle to lower the handle bar, as per **Figure 18 (B).**
- Once the handle bar is lowered, simultaneously push release latch **4** in the direction indicated, as per **Figure 19 (A),** and lift release latch **5** to disengage. While doing this, slowly lift stroller to allow it to fold completely, as per **Figure 20.**
- Finally, check that the storage latch has fully engaged.

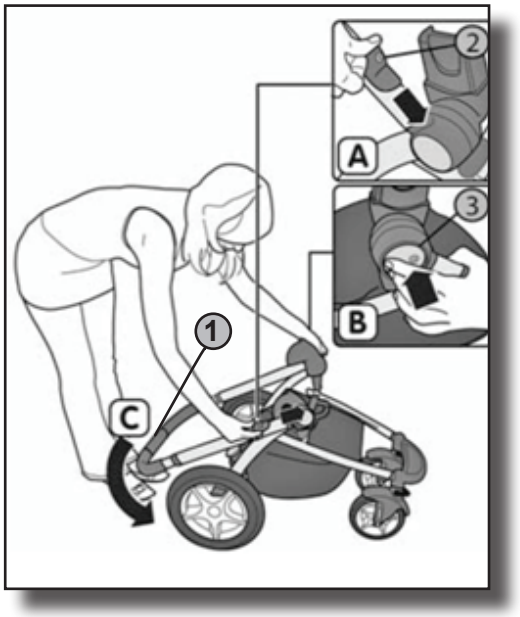

Figure 18

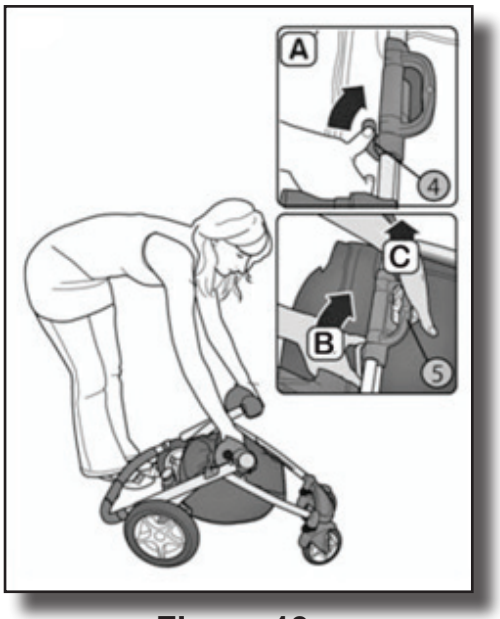

Figure 19

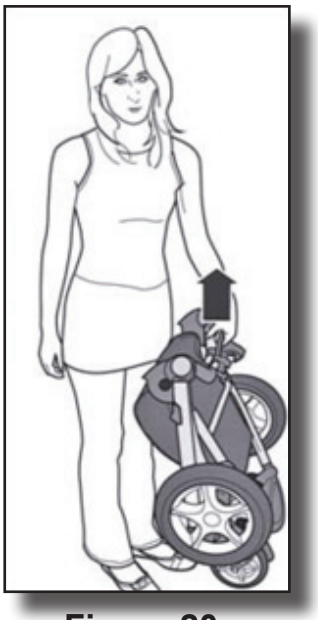

Figure 20

Using: Shuttle Stroller Sky Black (cont)

TO SECURE YOUR CHILD

A five-point harness is provided to secure your child.

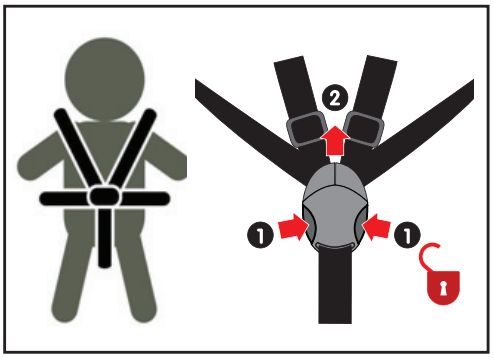

- The harness straps can be adjusted by moving each strap's slider ❷
- The buckle is released by squeezing the buckle locks ❶ together.

When not in use, disconnect shoulder strap/ waist straps from the buckle.

TO USE THE TETHER STRAP

Correct use of the tether strap will prevent a stroller runaway and possible injury to your child.

Whenever a child is in the stroller the large loop should be around your wrist, as per the photo.

Using: Shuttle Stroller Sky Black
with One-Safe Infant Carrier

TO ATTACH THE ONE-SAFE INFANT CARRIER TO THE STROLLER

- Remove the seat from the stroller, as per **Figure 10 Page 9**. To remove seat.
- Lower the One-Safe Infant Carrier (facing the handle) into the seat mounting brackets of the Shuttle Stroller, as per **Figure 21,** until you hear them both 'click' into place, as per **Figure 22.**

Figure 21

Figure 22

To ensure the One-Safe Infant Carrier is locked into place, lift up on the capsule handle.

Do not attempt to install the One-Safe Infant Carrier with the child facing forward.

Do not lift the stroller by the One-Safe Infant Carrier.

Maximum weight that can be carried in this One-Safe Infant Carrier is: 9kg.

Do not use this stroller with any other model Infant Carrier.

Using: Shuttle Stroller Sky Black
with One-Safe Infant Carrier

TO REMOVE THE ONE-SAFE INFANT CARRIER FROM THE STROLLER

- Extend the One-Safe Infant Carrier canopy/carry handle fully forward, press the red buttons (**A**) on each side of the Shuttle Stroller, as per **Figure 23,**
- Lift the One-Safe Infant Carrier clear of the stroller, as per **Figure 24.**

Figure 23

Figure 24

For operational features of the capsule, please refer to the instruction manual provided with your One-Safe Infant Carrier.

PRODUCT CARE AND MAINTENANCE

- Always store in a clean and dry place.
- Clean the frame by wiping with a damp cloth.
- Do not use abrasives, bleach or strong detergents.
- Spot clean fabrics with warm water and mild soap.
- Ensure fabric is dry before storing.
- Occasionally clean and lubricate wheels and axles with a light lubricating oil.
- Regularly check for loose parts and tighten when required.
- Damaged or broken parts should be immediately replaced.

CUSTOMER SERVICE

Please contact our Customer Service Department if you experience a problem with this product or require assistance:

AUSTRALIAN CUSTOMERS

Email sales@dorel.com.au
Web www.dorel.com.au
Phone 1 (03) 8311 5300
Address 655-685 Somerville Road
Sunshine West, Vic, 3020
Phone 2 1300 809 526 (local call cost)
Hours 8:30 am – 4:30 pm,
Monday to Friday
Postal Dorel Australia Pty Ltd
P.O. Box 1260
Sunshine West, Victoria,
3020
Australia

NEW ZEALAND CUSTOMERS

customerservice@igc.co.nz
www.dorel.com.au
(09) 274 1040
14 Sir William Avenue, East
Tamaki, Auckland, 2013.
0800 628 000 (Toll Free)
8:00 am – 4:00 pm,
Monday to Friday.
IGC Dorel New Zealand Ltd
P.O. Box 82377 Highland Park
Mt Wellington
New Zealand

DOREL Australia

Specifications are subject to change without notice.
Copy or reproduction without permission is prohibited.
© 2013 Dorel Australia Pty Ltd. All Rights Reserved.
www.dorel.com.au